

Figure 8 Overall and installation dimensions of WPB-1

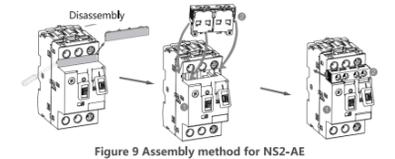


Figure 9 Assembly method for NS2-AE

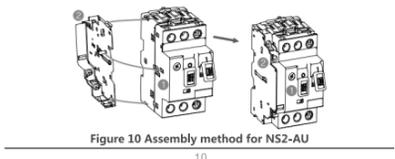


Figure 10 Assembly method for NS2-AU

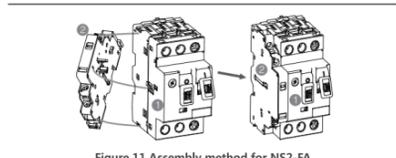


Figure 11 Assembly method for NS2-FA

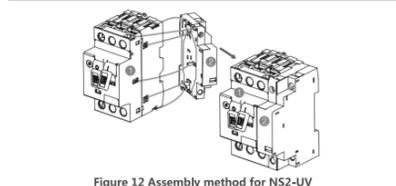


Figure 12 Assembly method for NS2-UV

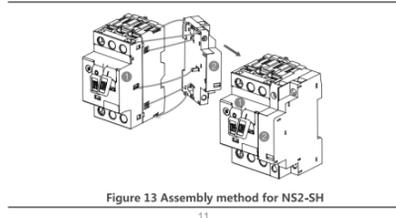


Figure 13 Assembly method for NS2-SH

3.2 Wiring

Use single core PVC insulated copper conductor for wiring, see Table 7 for sectional area of the wire.

Table 7 Connecting wire for operating current

| Current range A | Nominal sectional area of connecting wire mm ² |
|-----------------|---|
| 0 < I ≤ 8 | 1.0 |
| 8 < I ≤ 12 | 1.5 |
| 12 < I ≤ 20 | 2.5 |
| 20 < I ≤ 25 | 4.0 |
| 25 < I ≤ 32 | 6.0 |

3.3 Adjustment and inspection

1) Check if the rated voltage of the starter U_e is consistent with the actual control voltage of power.

2) Check if the rated operating current of the starter is within its setting current range.

3) Check if the starter can operate smoothly: press down the green button of the starter or turn the knob to ON position. Flip the guide plate beside the TEST mark on the cover according to the direction shown by the arrow. You can hear the operation sound of the contact, and the green button will bounce back or the knob will be turned to OFF position. Replace the starter if there is any abnormality.

4) The operating current of the starter (setting current value of thermal element) should be determined by the rated current of the motor. If the setting current value between two scales is required, turn the cam slightly accordingly. User can make adjustment during operation.

3.4 Coordination of protection

If the short-circuit current is not bigger than the rated ultimate short circuit breaking capacity of the starter, the protection should be provided by the starter; if the short circuit current is bigger than the rated ultimate short

circuit breaking capacity of the starter, the protection should be provided by the fuse or circuit breaker. See Table 8 for model and melt current of the backup fuse of starter.

Table 8 Model and melt current of the backup fuse of starter

| No. | Model | Adjustment range of thermal element setting current A | Backup fuse is only needed when the expected short circuit current $I_{cc} > I_{cu}$ rated ultimate short circuit breaking capacity | | | | | | | | | | |
|-----|-----------|---|---|----------------|------------|------------|------------|----|----|----|----|----|----|
| | | | 230/240V aA | 400/415V aA | 440V aA | 500V aA | 600V aA | | | | | | |
| 1 | NS2-25(X) | 0.1-0.16 | * | * | * | * | * | * | * | | | | |
| 2 | | 0.16-0.25 | * | * | * | * | * | * | * | | | | |
| 3 | | 0.25-0.4 | * | * | * | * | * | * | * | | | | |
| 4 | | 0.4-0.63 | * | * | * | * | * | * | * | | | | |
| 5 | | 0.63-1 | * | * | * | * | * | * | * | | | | |
| 6 | | 1-1.6 | * | * | * | * | * | * | * | | | | |
| 7 | | 1.6-2.5 | * | * | * | * | * | 16 | 20 | | | | |
| 8 | | 2.5-4 | * | * | * | * | * | 25 | 32 | | | | |
| 9 | | 4-6.3 | * | * | * | 50 | 63 | 50 | 63 | 32 | 40 | | |
| 10 | | 6-10 | * | * | 63 | 80 | 50 | 63 | 50 | 63 | 32 | 40 | |
| 11 | | 9-14 | * | * | 63 | 80 | 50 | 63 | 50 | 63 | 40 | 50 | |
| 12 | | 13-18 | * | * | 63 | 80 | 50 | 63 | 50 | 63 | 40 | 50 | |
| 13 | | 17-23 | 80 | 100 | 80 | 100 | 63 | 80 | 50 | 63 | 40 | 50 | |
| 14 | | 20-25 | 80 | 100 | 80 | 100 | 63 | 80 | 50 | 63 | 40 | 50 | |
| 15 | | NS2-32(X) | 24-32 | 80 | 100 | 80 | 100 | 63 | 80 | 50 | 63 | 40 | 50 |
| 16 | | NS2-32H | 0.1-0.16 | * | * | * | * | * | * | * | * | * | |
| 17 | | | 0.16-0.25 | * | * | * | * | * | * | * | * | * | |
| 18 | | | 0.25-0.4 | * | * | * | * | * | * | * | * | * | |

13



Website: <http://en.chint.com>
E-mail: global-sales@chint.com
Yueqing Zhenyuan 325603 P.R.China
Add: No.1, CHINT Road, CHINT Industrial Zone North Baking
Zhejiang Chint Electric Co., Ltd.

NS2-25(X), NS2-32(X), NS2-32H
AC Motor Starter
User Instruction

CHINT ELECTRICS

CHINT

NO:2020.04



NS2-25(X), NS2-32(X), NS2-32H
AC Motor Starter

User Instruction

Standard: IEC/EN 60947-2
IEC/EN 60947-4-1

Table 8 (continued)

| No. | Model | Adjustment range of thermal element setting current A | Backup fuse is only needed when the expected short circuit current $I_{cc} > I_{cu}$ rated ultimate short circuit breaking capacity | | | | | | | | | |
|-----|---------|---|---|----------------|------------|------------|------------|-----|----|----|----|----|
| | | | 230/240V aA | 400/415V aA | 440V aA | 500V aA | 600V aA | | | | | |
| 19 | NS2-32H | 0.4-0.63 | * | * | * | * | * | * | * | | | |
| 20 | | 0.63-1 | * | * | * | * | * | * | * | | | |
| 21 | | 1-1.6 | * | * | * | * | * | * | * | | | |
| 22 | | 1.6-2.5 | * | * | * | * | * | 20 | 25 | | | |
| 23 | | 2.5-4 | * | * | * | * | * | 25 | 32 | | | |
| 24 | | 4-6.3 | * | * | * | * | * | 40 | 50 | | | |
| 25 | | 6-10 | * | * | * | 50 | 63 | 50 | 63 | 40 | 50 | |
| 26 | | 9-14 | * | * | * | 50 | 63 | 50 | 63 | 50 | 63 | |
| 27 | | 13-18 | * | * | 100 | 125 | 80 | 50 | 63 | 50 | 63 | |
| 28 | | 17-23 | * | * | 100 | 125 | 80 | 100 | 50 | 63 | 50 | 63 |
| 29 | | 20-25 | * | * | 100 | 125 | 80 | 100 | 50 | 63 | 50 | 63 |
| 30 | 24-32 | * | * | 100 | 125 | 80 | 100 | 50 | 63 | 50 | 63 | |

Note: * means fuse is not needed.

4 Maintenance

Clean the dust on the motor starter timely. Conduct product test and maintenance every half a year to ensure the smooth operation of the product and the good contact of NO and NC contacts. Tighten the terminal screws with specified torque and align the load protection capability of the motor starter according to commissioning requirements.

Be careful when handling and installing the starter. It is prohibited to move the product by crane with strong impact so that the product will not be damaged and its protection characteristics will not change.

14

Table 9 Analysis and Troubleshooting of Faults

| Symptoms | Cause analysis | Troubleshooting method and precautions |
|---------------------------|---|--|
| Misoperation of starter | The setting current value of the starter is smaller than the actual operating current of the motor. | Fine tune the cam to match the set current matches the actual motor current. |
| | Strong shock or vibration | Check installation status and conduct troubleshooting. Do not place the product in environment with strong shock or vibration. |
| Starter does not operate. | Frequent start of motor | The start frequency of the motor should not exceed 30 times/hour |
| | The sectional area of the connecting wire is too small. | Use standard wire according to Table 7. |
| Starter does not operate. | The setting current value of the starter is bigger than the rated current value of the motor. | Fine tune the cam to match the set current matches the actual motor current. |
| | The sectional area of the connecting wire is too big. | Use standard wire according to Table 7. |

5 Environmental Protection

In order to protect the environment, the product or product parts should be disposed of according to the industrial waste treatment process, or be sent to the recycling station for assortment, dismantling and recycling according to local regulations.

15

Table 1 (continued)

| No. | Model | Frame size rated current I_{en} A | Release rated current I_n A | Adjustment range of release setting current A | Release setting current value for short circuit current I_{sc} A | Rated ultimate short circuit breaking capacity I_{cu} kA | | | Arc distance mm | | | | | | |
|-----|-------------------|-------------------------------------|-------------------------------|---|--|--|------|------|-----------------|-----------|------|-----|-----|-----|----|
| | | | | | | 400/415V | 690V | 690V | | | | | | | |
| 6 | NS2-25 NS2-25X | 25 | 1.6 | 1-1.6 | 22.5 | 100 | 100 | 100 | 40 | | | | | | |
| 7 | | | | | | 100 | 100 | 3 | | 2.25 | | | | | |
| 8 | | | | | | 100 | 100 | 3 | | 2.25 | | | | | |
| 9 | | | | | | 100 | 100 | 3 | | 2.25 | | | | | |
| 10 | | | | | | 138 | 15 | 7.5 | | 3 | 2.25 | | | | |
| 11 | | | | | | 170 | 15 | 7.5 | | 3 | 2.25 | | | | |
| 12 | | | | | | 223 | 15 | 7.5 | | 3 | 2.25 | | | | |
| 13 | | | | | | 327 | 15 | 6 | | 3 | 2.25 | | | | |
| 14 | | | | | | 327 | 15 | 6 | | 3 | 2.25 | | | | |
| 15 | | | | | | NS2-32 NS2-32H | 32 | 2.5 | | 0.16-0.25 | 2.4 | 100 | 100 | 100 | 40 |
| 16 | | | | | | 100 | | | | | | 100 | 100 | 100 | |
| 17 | | | | | | 100 | | | | | | 100 | 100 | 100 | |
| 18 | | | | | | 100 | | | | | | 100 | 100 | 100 | |
| 19 | | | | | | 5 | | | | | | 100 | 100 | 100 | |
| 20 | 8 | 100 | 100 | 100 | | | | | | | | | | | |
| 21 | 13 | 100 | 100 | 100 | | | | | | | | | | | |
| 22 | 13 | 100 | 100 | 100 | | | | | | | | | | | |
| 23 | 13 | 100 | 100 | 100 | | | | | | | | | | | |
| 24 | 13 | 100 | 100 | 100 | | | | | | | | | | | |
| 25 | 13 | 100 | 100 | 100 | | | | | | | | | | | |
| 26 | 13 | 100 | 100 | 100 | | | | | | | | | | | |
| 27 | 13 | 100 | 100 | 100 | | | | | | | | | | | |
| 28 | 13 | 100 | 100 | 100 | | | | | | | | | | | |
| 29 | 13 | 100 | 100 | 100 | | | | | | | | | | | |
| 30 | 13 | 100 | 100 | 100 | | | | | | | | | | | |

02

Table 2 Technical parameters and performance

| No. | Content | Parameters |
|-----|---|-----------------------------|
| 1 | Rated operating voltage U_e (V) | 690V and below |
| 2 | Rated frequency (Hz) | 50/60Hz |
| 3 | Rated duty system, specify intermittent duty level (if any) | Long term duty system |
| 4 | Rated insulation voltage U_i (V) | 690V |
| 5 | Rated impulse withstand voltage U_{imp} (kV) | 8kV |
| 6 | Enclosure protection class | IP20, IP55 (Waterproof box) |
| 7 | Conductor (wire/conducting bar) strip length before being inserted into terminal (mm) | 10 |
| 8 | Conductor (wire/conducting bar) sectional area mm ² | 1-6 |
| 9 | Allowable maximum number of conductor (wire/conducting bar) to be inserted | 2 |
| 10 | Size of fixing screws (or bolts) at wiring end | M4 |
| 11 | Tightening torque for fixing screws at wiring end (N.m) | 1.7 |
| 12 | Operating frequency (times/hour) | ≤ 30 |

03

Table 3 Basic parameters of auxiliary contacts and fault signal contact

| Name | Model | Terminal mark | Rated insulation voltage U_i V | Conventional thermal current I_a A | Application category | Rated operating voltage U_e V | Rated operating current I_n A |
|---------------------------------------|----------|---------------|----------------------------------|--------------------------------------|----------------------|---------------------------------|---------------------------------|
| Instantaneous auxiliary contact block | NS2-AE20 | 13-14, 23-24 | 250 | 2.5 | AC-15 | 230/240 | 0.5 |
| | | | | | | DC-13 | 60 |
| Instantaneous auxiliary contact block | NS2-AE11 | 13-14, 21-22 | 250 | 2.5 | AC-15 | 230/240 | 0.5 |
| | | | | | | DC-13 | 60 |

04

Table 3 (continued)

| Instantaneous auxiliary contact block | Model | Terminal mark | Rated insulation voltage U_i V | Conventional thermal current I_a A | Application category | Rated operating voltage U_e V | Rated operating current I_n A |
|--|-----------|---------------|----------------------------------|--------------------------------------|----------------------|---------------------------------|---------------------------------|
| Instantaneous auxiliary contact block | NS2-AU20 | 13-14, 23-24 | 690 | 6 | AC-15 | 230/240 | 3.3 |
| | | | | | | DC-13 | 220 |
| Instantaneous auxiliary contact block | NS2-AU11 | 13-14, 21-22 | 690 | 6 | AC-15 | 230/240 | 3.3 |
| | | | | | | DC-13 | 220 |
| Fault signal contact and instantaneous auxiliary contact block | NS2-FA010 | 95-96 | 250 | 2.5 | AC-14 | 230/240 | 0.3 |
| | | | | | | DC-13 | 60 |
| Fault signal contact and instantaneous auxiliary contact block | NS2-FA011 | 95-96 | 250 | 2.5 | AC-14 | 230/240 | 0.3 |
| | | | | | | DC-13 | 60 |
| Fault signal contact and instantaneous auxiliary contact block | NS2-FA010 | 51-52 | 690 | 6 | AC-15 | 230/240 | 3.3 |
| | | | | | | DC-13 | 220 |
| Fault signal contact and instantaneous auxiliary contact block | NS2-FA011 | 51-52 | 690 | 6 | AC-15 | 230/240 | 3.3 |
| | | | | | | DC-13 | 220 |

05

Safety Warning

- Only professional technicians are allowed for installation and maintenance.
- Installation in any damp, condensed-phase environment with inflammable and explosive gas is forbidden.
- When the product is being installed or maintained, the power must be switched off.
- You are prohibited from touching the conductive part when the product is operating.

1 Use Purpose

NS2-25(X), NS2-32(X), NS2-32H AC motor starters (hereinafter referred to as starters) are applicable to circuits with frequency of AC 50Hz or 60Hz, rated operating voltage up to 690V and current from 0.1 to 32A. They are used for infrequent start control of 3-phase AC motor and they can protect motor from short circuit, overload and loss of phase. They can also be used for distribution line protection and infrequent load transfer or used as isolators.

2 Main Technical Parameters

Table 1 Main technical parameters

| Environmental conditions | | | | | | | | |
|---------------------------------------|---|-------------------------------------|-------------------------------|---|--|--|---|-----------------|
| Ambient temp. (°C) | -5°C ~ +40°C, average temperature should not exceed +35°C within 24h | | | | | | | |
| Hot and humid atmospheric conditions | Relative humidity should not exceed 50% at +40°C; up to 90% at +20°C; | | | | | | | |
| Altitude | No influence below 2000m | | | | | | | |
| Pollution class/installation category | Class 3/II, III | | | | | | | |
| Technical parameters | | | | | | | | |
| No. | Model | Frame size rated current I_{en} A | Release rated current I_n A | Adjustment range of release setting current A | Release setting current value for short circuit current I_{sc} A | Rated ultimate short circuit breaking capacity I_{cu} kA | Rated operating short circuit breaking capacity I_{cs} kA | Arc distance mm |
| 1 | NS2-25 NS2-25X | 25 | 1.6 | 0.16-0.25 | 2.4 | 100 | 100 | 100 |
| 2 | | | | | | 100 | 100 | 100 |
| 3 | | | | | | 100 | 100 | 100 |
| 4 | | | | | | 100 | 100 | 100 |
| 5 | | | | | | 100 | 100 | 100 |

01

3 Installation

3.1 Installation

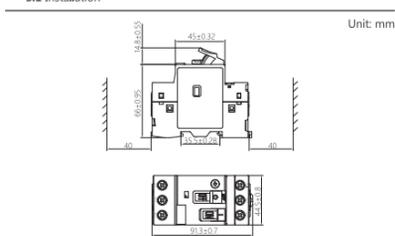


Figure 2 Overall and installation dimensions of NS2-25(X)/NS2-32(X)

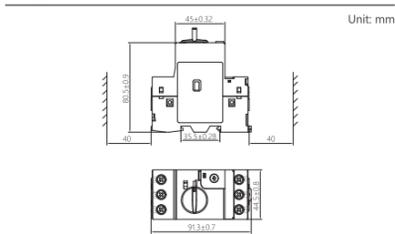


Figure 3 Overall and installation dimensions of NS2-25(X)/NS2-32(X)

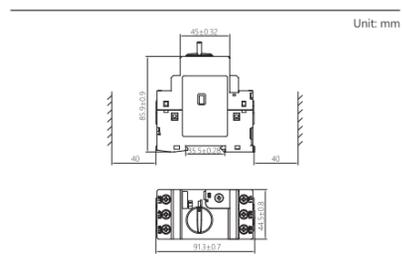


Figure 4 Overall and installation dimensions of NS2-32H

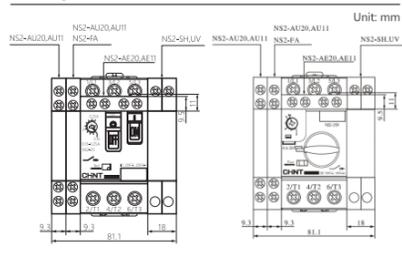


Figure 5 Assembly positions and dimensions of accessories

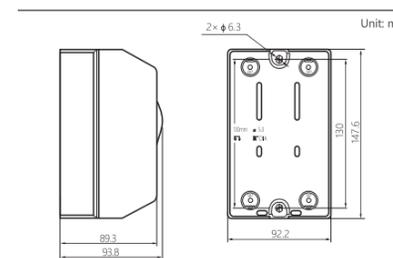


Figure 6 Overall and installation dimensions of NS2-MC

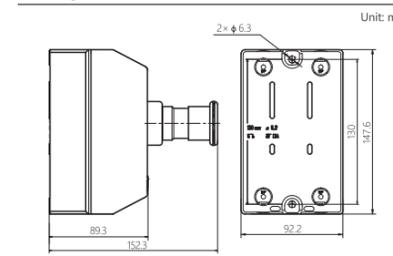


Figure 7 Overall and installation dimensions of NS2-MC01

Table 4 Model and basic parameters of undervoltage release and shunt release

| Name | Model | Terminal mark | Rated insulation voltage U_i V | Rated control circuit voltage U_c |
|----------------------|-----------|---------------|----------------------------------|-------------------------------------|
| Undervoltage release | NS2-UV110 | D1/D2 | 690 | 110V - 115V/50Hz or 127V/60Hz |
| | NS2-UV220 | D1/D2 | | 220V - 240V/50Hz |
| | NS2-UV380 | D1/D2 | | 380V - 400V/50Hz or 440V/60Hz |
| Shunt release | NS2-SH110 | | | |